

Additional Instructions for **SCHÖNBERG**

ATTACHING THE STAND FOR SCHÖNBERG

To connect SCHÖNBERG to the stand (please see drawing):

1. Please put on the enclosed gloves to avoid fingerprints.
2. Turn the speaker upside down.
3. Put the stand on the speaker, being sure that the holes for the four bolts align with the matching sockets.

ATTENTION: Please turn the stand according to the sticker, stating "FRONT".

4. Attach the stand by fixing the bolts through the stand to the speaker by using the included hexagonal tool (Allen wrench/key).
5. Now screw the spikes into the sockets at the end o

ACCESSORIES FOR SCHÖNBERG FOUR SPIKE STAND:

BRACKET: 1 pc.

SPIKES: 4 pcs.

BOLTS: 4 pcs.
M6 x 25 mm bolts

HEXAGONAL TOOL (Allen wrench/key): 1 pc.
for adjusting the bolts.

BANANA PLUGS: 2 pcs.
silver plated, short version for convenient connection
of speaker cables.

GLOVES: 2 pcs.
for protecting the speaker against fingerprints.

