



Additional Instructions for TRIO

Vienna Acoustics redefined the performance expectations of on-wall loudspeakers with the Schönberg Series.

Finally, true high fidelity could be realized using loudspeakers that do not infringe upon your living space.

The Schönberg Series models BERG, WEBERN and SCHÖNBERG all feature low profile enclosures and a natural aluminum finish that make them ideal partners for use with wall-mounted plasma televisions.

With this in mind, we created TRIO.

Designed for individuals seeking a simple and unified solution for providing the Left, Right and Center channels in a surround sound system without sacrificing sound quality.

Sized, scaled and finished to cosmetically blend with virtually any plasma television when mounted beneath its screen.

In this configuration excellent midrange articulation is achieved and a surprisingly wide soundstage is realized.

TRIO's superb channel separation and pin-point image localization rivals performance associated with more complicated systems.

TRIO WALL-MOUNTING KIT

To prepare the speaker for wall mounting

1. Please put on the enclosed gloves to avoid fingerprints.
2. Remove the aluminium inlays on the 2 sides of the speaker. As they are attached with magnets, they simply lift off.
3. Put the matching wall-mounting inlay on one side of the speaker, so that the two holes for the two bolt sockets line up.

ATTENTION:

The two inlays are slightly different for use on each of the respective sides. In order to mount the inlays correctly the three conical milled points must be visible and the mounting bolts are able to be inserted.

4. Now attach the appropriate inlay with the two bolts, by using the hexagon-tool (Allen wrenh/ key).
5. Now turn the speaker over and execute the same procedure.

To attach the wall-mounting device to the wall

ATTENTION:

For best sound, TRIO should be mounted horizontally (Left, Right and Center channel), with the tweeters preferably on the upper side.

For best performance, it is recommended that the speaker is angled toward the listening position. This means that special attention must be paid when mounting the bracket.

If you have chosen to mount TRIO under your TV (close-to-ground), mount the bracket with the thin flat profile to the upper side.

If mounting the speaker above your TV, mount the bracket with the thin flat profile to the lower side.


It is recommended that before the bracket is attached to the wall that the speaker in the bracket be held up to wall to verify the correct position of the bracket and the conical point position that is to be used to mount the speaker in the bracket.

Warning:

The most secure means of attaching the wall-mounting bracket to the wall is by screwing into a stud. Should a stud not be available be sure to use all four of the mounting anchors.

Further, when attaching to a sheet-rock wall board, be certain to use the larger, metal "American" anchor to ensure a solid and permanent mounting.

1. First mark the position on the wall using the four holes of the wall-mounting bracket as a guide. Use a level placed tightly against the bracket while making the marks to ensure that the bracket will be mounted properly.
2. After drilling the holes, and if the bracket is not being mounted into a stud, screw the four anchors firmly and completely into the wall.
3. Now fix the wall-mounting bracket to the wall, either by using the provided wood-screws into a stud or into the appropriate anchor.

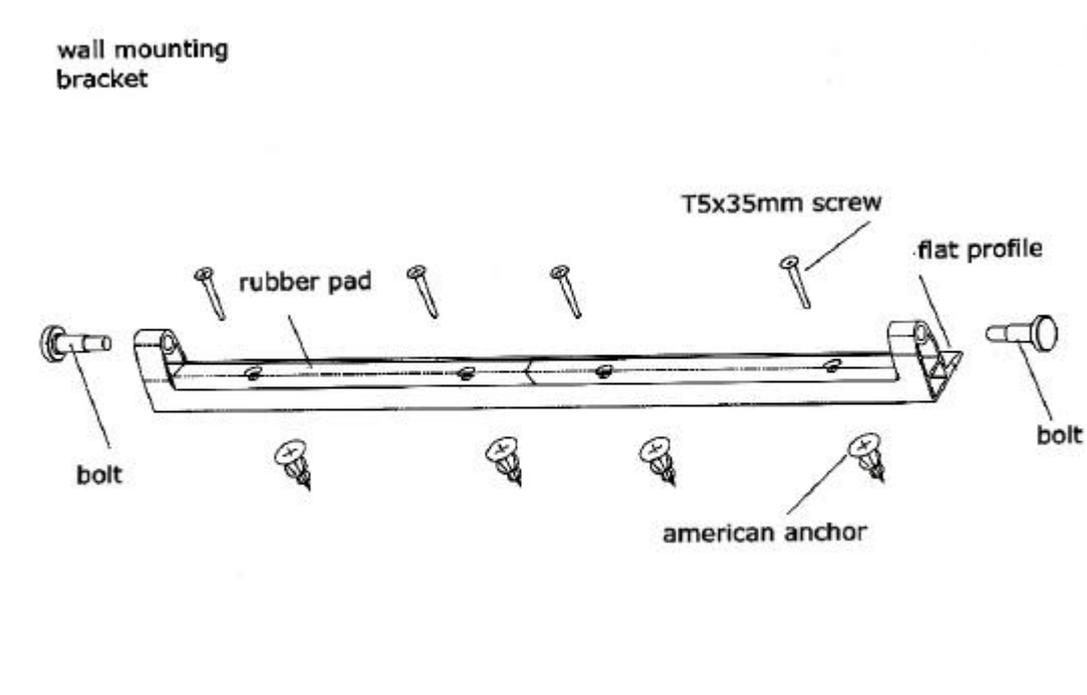

To attach the speaker to the wall-mounting device

1. Insert one of the conical tipped bolt inside the wall-mounting bracket completely with the Allen wrench (hexagonal tool).

ATTENTION:

The accessories box includes two plastic conical sockets, which you can put on the conical point of the bolts to avoid scratching the inlays while determining final positioning of the speaker. Once the preferred position is found, they may be removed, or left in place.

2. After you have chosen one of the 3 positions, place the speaker in a way that the conical tipped bolt fits into the chosen conically milled point on the cabinet inlay.

3. Press the speaker against the rubber-pad of the mounting bracket and attach the speaker to the bracket by tightening completely the second conical tipped bolt with the Allen wrench (hexagonal tool). Please make sure that you use the same conically milled point on both, left and right, inlays.

ATTENTION:

For safety reasons it is recommended that the conical tipped bolts be checked and tightened periodically, or every six months.

ACCESSORIES FOR TRIO WALL MOUNTING BRACKET:

WALL MOUNTING DEVICE: 1 pc., for on-wall application.

WALL-MOUNTING INLAY: 2 pcs., to place on the speaker for attaching wall-mounting bracket.

CONICAL TIPPED BOLTS: 2 pcs., for connecting the cabinet with the wall-mounting bracket.

PLASTIC CONICAL SOCKETS: 2 pcs., to avoid scratches when inserting and adjusting bolts.

BOLTS: 4 pcs. M6 x 20 mm, for attaching the inlays to the cabinet.

ALLEN WRENCH (hexagonal tool): 2 pcs., for adjusting the screws and bolts.

METAL WALL MOUNTING ANCHORS AND SCREWS: 4 pcs., for mounting in sheetrock or other wall board wall construction material.

PLASTIC WALL MOUNTING ANCHORS AND SCREWS: 4 pcs., for mounting in plaster or concrete wall construction material.

GLOVES: 2 pcs., for protecting the speaker against fingerprints.

LOGO: 1 pce.

BANANA PLUGS RED/BLACK: 3 pcs./3 pcs.

TRIO CENTER STAND

ATTACHING THE CENTER STAND FOR TRIO

1. Please put on the enclosed gloves to avoid the potential of fingerprint oils staining the cabinet during assembly.
2. Pull out the two inlays of the speaker. They are attached with magnets and simply pull off.
3. Put the two aluminum side-brackets on the speaker as seen in the drawing below, and attach them with the 4 M6 x 20 mm bolts, using the Allen wrench (hexagonal tool).
4. Attach the base-plate according to the drawing, so that the eight holes (four in the bottom of the side-brackets and four in the base-plate) match.
5. Attach the base-plate with the four M6 x 25 mm bolts and washers, using the Allen wrench (hexagonal tool).

ATTENTION:

The Vienna Acoustics logo on the center stand faces the front.

ACCESSORIES FOR TRIO CENTER STAND:

BASE-PLATE: 1 pc.

SIDE-BRACKETS: 2 pcs., for connection between the speaker and the base-plate.

BOLTS: 4 pcs. M6 x 25 mm, including washers, for attaching the side-brackets to the base-plate.

4 pcs. M6 x 20 mm, for attaching the speaker to the side-brackets.

ALLEN WRENCH (hexagonal tool): 2 pcs., for adjusting the bolts.

BANANA PLUGS: 6 pcs., silver plated, short version for convenient connection of speaker cables.

GLOVES: 2 pcs., for protecting the speaker against fingerprints.

